

DVD CAM Software Support Center

DZ-MV100/200/208/230/238 Software Tutorials

 
How to Remove the USB Driver

You need to remove the USB driver when:


- You have installed an incorrect driver instead one for DZ-MV270 or MV350/380
 - You update the installed USB driver for DZ-MV100/200/208/230/238 with the latest version 4.03.
-

Removing the USB Device Driver


- 1 Insert a DVD-RAM disc into the DVDCAM, set the DVDCAM power switch for **Video**, and then connect the DVDCAM to the PC using the PC connection cable.
- 2 In **Control Panel**, double-click **System**.
- 3 Click the **Hardware** tab, and then click the **Device Manager** button.

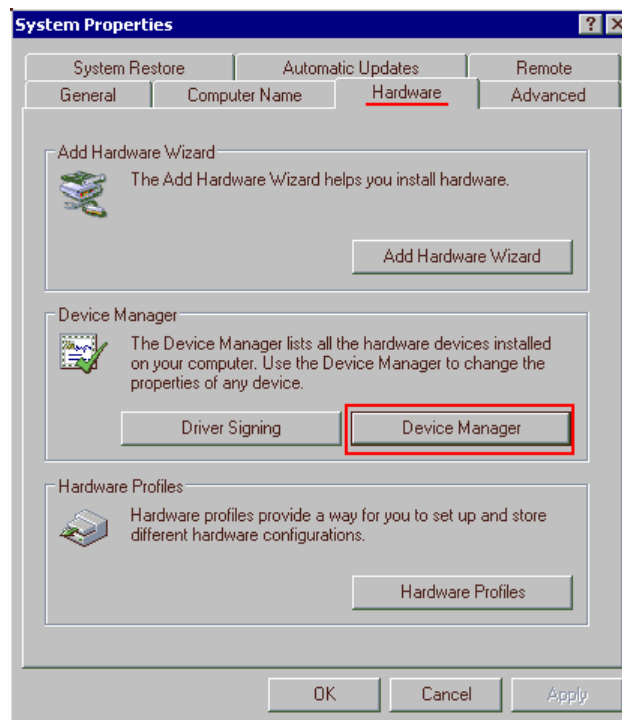

 - 4 Under **CD-ROM**, right-click **HITACHI DVD-RAM DZ-MV2** and click **Uninstall**.

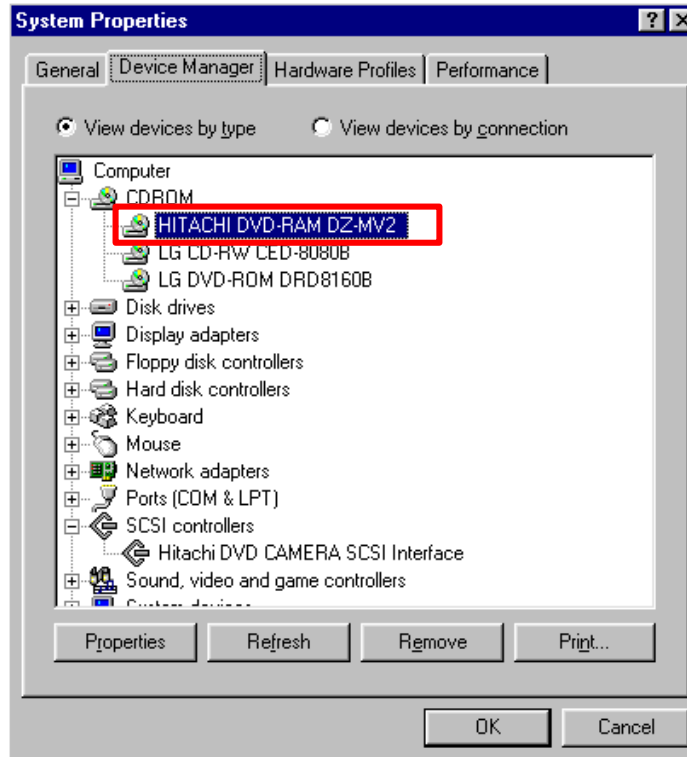

 - 5 Under **SCSI controllers**, right-click **Hitachi DVD CAMERA SCSI Interface** and click **Uninstall**.

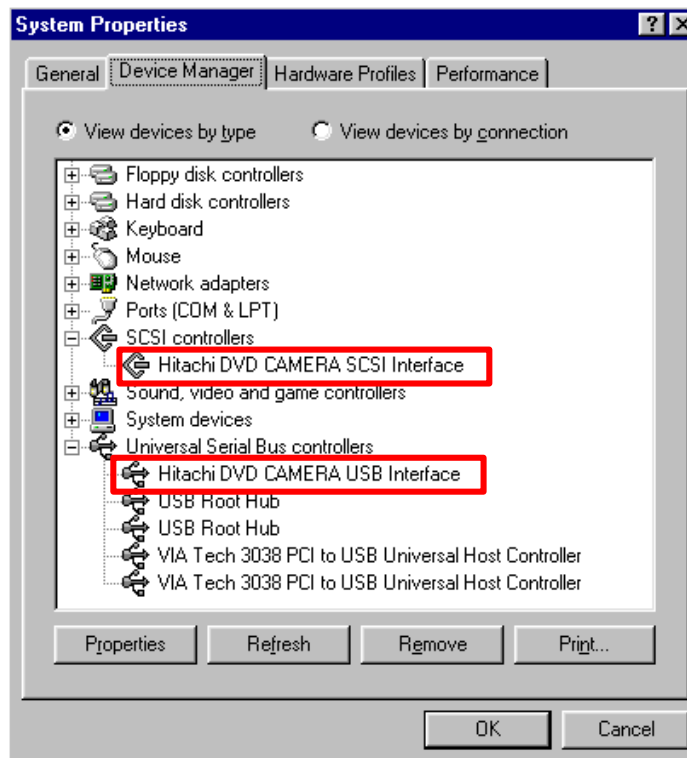

- 6 Under **Universal Serial Bus controllers**, right-click **Hitachi DVD CAMERA USB Interface** and click **Uninstall**.

- 7** Disconnect the DVDCAM with the PC, and then delete the following files:

For Windows 98/Me users:

C:\Windows\System\losubsys\dzmvscsi.mpd

C:\Windows\System32\Drivers\dzmvusb.sys

C:\Windows\inf\other\dzmv100s.inf

C:\Windows\inf\other\dzmv100u.inf

For Windows XP users:

C:\Windows\System32\Drivers\dz2kscsi.sys

C:\Windows\System32\Drivers\dz2kusb.sys

For Windows 2000 users:

C:\WINNT\System32\Drivers\dz2kscsi.sys

C:\WINNT\System32\Drivers\dz2kusb.sys

 
Note: If the **inf** folder is not found, follow the instructions in “**How to Show Hidden Files and Folders**” below and retry it. If you cannot see the file extension such as “.mpd” “.sys”, and “.inf”, follow the instructions in the “**How to Show File Extensions**” below to show.

- 8** Disconnect the DVDCAM from PC and restart Windows.

How to Show Hidden Files and Folders


Windows XP / 2000 / Me

- 1 Open **My Computer**.
- 2 From the **Tools** menu, click the **Folder Options**, and then click the **View** tab.
- 3 Select **Show hidden files and folders** and click **OK**.

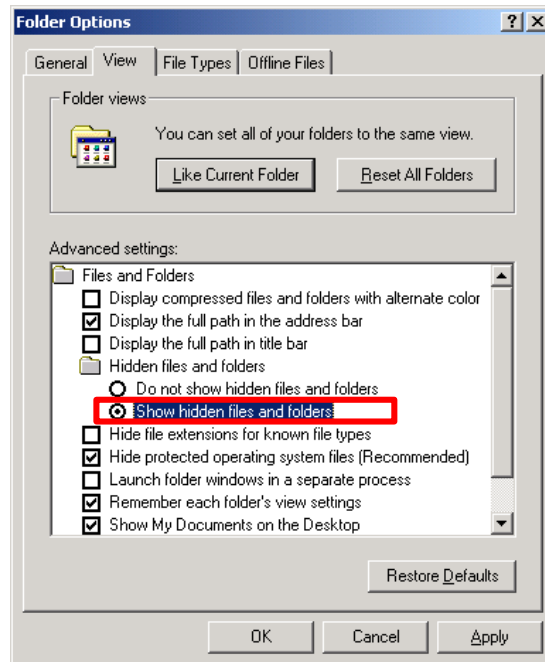

Windows 98

 - 1 Open **My Computer**.
- 2 From the **View** menu, click the **Folder Options**, and then click the **View** tab.
- 3 Under **Hidden files**, select **Show all files** and Click **OK**.

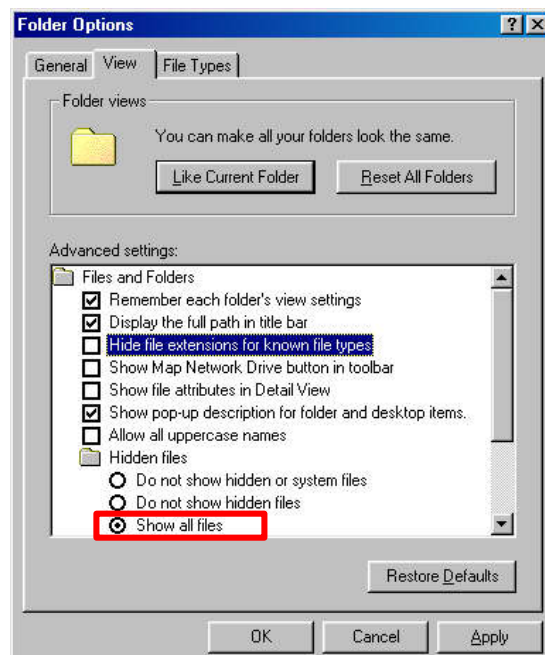

How to Show File Extensions

Windows XP / 2000 / Me

- 1 Open **My Computer**.
- 2 From the **Tools** menu, click the **Folder Options**, and then click the **View** tab.
- 3 Clear the **Hide the extensions for known file types** check box and Click **OK**.

Windows 98

- 1 Open **My Computer**.
- 2 From the **View** menu, click the **Folder Options**, and then click the **View** tab.
- 3 Clear the **Hide the extensions for known file types** check box and Click **OK**.